


Tools Needed:

- Packing Tape

Instructions

Packing Material List:

- (1) Bottom foam set
- (2) Head foam piece
- (3) Top foam Piece
- (4) Shipping Box

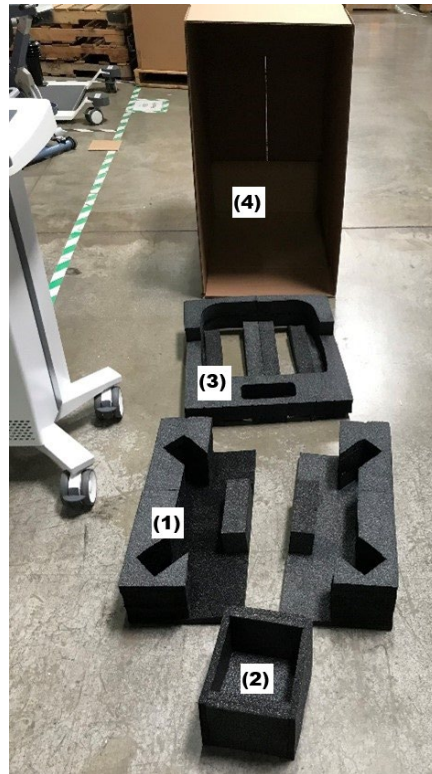

1. Insert the base and casters into the two-piece bottom foam set (1).
2. You may need to lock the caster brakes and tilt the unit to do this.



3. Guide the Casters into the slots.
4. Repeat for the opposite side.



5. Place SWD Head Foam Piece (2) on the top of the Applicator Head, then fold entire arm down to fit the head into the slot in the base foam set. You may have to extend the upper arm to get it into the slot.



6. Install the Top Foam Piece (3). The rectangle hole goes over the Arm Mounting Joint



7. Slide the unit into the box (4). Ensure the box Arrows are pointed upward.



8. Carefully tip the box with SWD until it is resting on its side.



- 9. Tape the box closed, ensuring that the seams are secure enough to shipping.



- 10. Lift box with Arrows pointing upward. Packaging is now complete.



- 11. Affix the return label, found in the packing slip pouch, over the previous label.
- 12. Set in your normal FedEx pickup location, or refer to the swap email from Customer Support for FedEx pickup options.