


Q20 User Manual

This product is a multifunctional intelligent remote control with 360° sensor control function which can be used as an air mouse, laser wireless presenter, android remote control.



Functions:

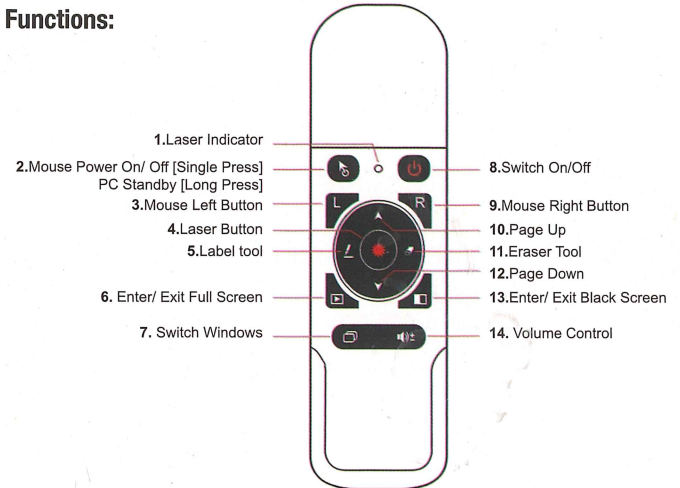

		Compatibility										
Buttons	Functions	Description	Windows (Xp or Above)			Mac os		Android (4.4 or Above)				
			Office	WPS	Prezi	Keynote	MS office365	Prezi	WPS	Office		
	Mouse Switch	Turn the mouse on/off	√	√	√	√	√	√	√	√	√	√
	PC Standby	Press for 2s to enter standby status	√	√	√	√	√	√	√	√	√	√
	Indicator Light	LED light indicates the working status	√	√	√	√	√	√	√	√	√	√
	Switch On/Off	Press for 2s to power on/ off	√	√	√	√	√	√	√	√	√	√
	Left Button	Mouse left button	√	√	√	√	√	√	√	√	√	√
	Right Button	Mouse right button	√	√	√	√	√	√	√	√	√	√
	Laser Button	Hold on to keep the light on	√	√	√	√	√	√	√	√	√	√
	Page Up	The ↑key on the keyboard	√	√	√	√	√	√	√	√	√	√
	Page Down	The ↓key on the keyboard	√	√	√	√	√	√	√	√	√	√
	Label Button	Press to start the mark function in full screen	√	√	x	x	x	x	√	√	√	x
	Eraser Button	Press to clear all marks	√	√	x	√	√	x	√	√	√	x
	Enter/Exit Full Screen	Press to enter full screen or exit full screen	√	√	x	√	√	x	√	√	√	x
	Black Screen	Press to enter black screen and press any button to exit	√	√	√	√	√	√	√	√	√	x
	Windows Switch Button	Press to start Window switch function, and click it to select the windows, the other windows will stay in the taskbar	√	√	√	x	x	x	√	√	√	√
	Volume Control	Press and swing up or down to adjust the volume, release it to stop adjustment	√	√	√	√	√	√	√	√	√	√

Specifications

Transmitter:

- ① 6-Axis Sensor scheme, 3-Axis G-Sensor + 3-Axis Gyro Sensor
- ② Frequency Technology: 2.4GHz
- ③ Control Distance: 49-66 ft/ 15-20 meters
- ④ Wireless Frequency: 2.402-2.483Ghz
- ④ Working Current <<15mA
- ⑤ Standby Current <<30uA
- ⑥ Battery: 2x AAA batteries (Not included)
- ⑦ Indicator Light: Blue LED indicator
- ⑧ Product Size: 5.31" * 1.65" * 0.95 in/ 135*42*24mm (length * width * height)
- ⑨ Weight: 1.51 Oz/ 43 g
- ⑩ Laser Class: 3R

USB Receiver:

- ① Operation Systems: Windows 2003, XP, Vista, Windows 7/8/10, Mac OS, Linux, Android
- ② USB Type: USB 2.0

Precautions

1. Battery Power: Please make sure that the battery power is enough. When in low battery voltage, the cursor stability will be affected and even drift may occur.
2. Indicator light: A blue LED indicator light is built in the middle of this product. The blue light will be on when working.

When the blue light flashes, it indicates the disconnection of the device. Please check the connection between the receiver and the computer host or whether it is blocked by metal.

In addition, the indicator light will flash one time per second at low battery power when in connection, indicating that the batteries need to be changed. It can still work for a while at that time, but as the voltage decreases, the air mouse may not work properly and the laser will weaken.